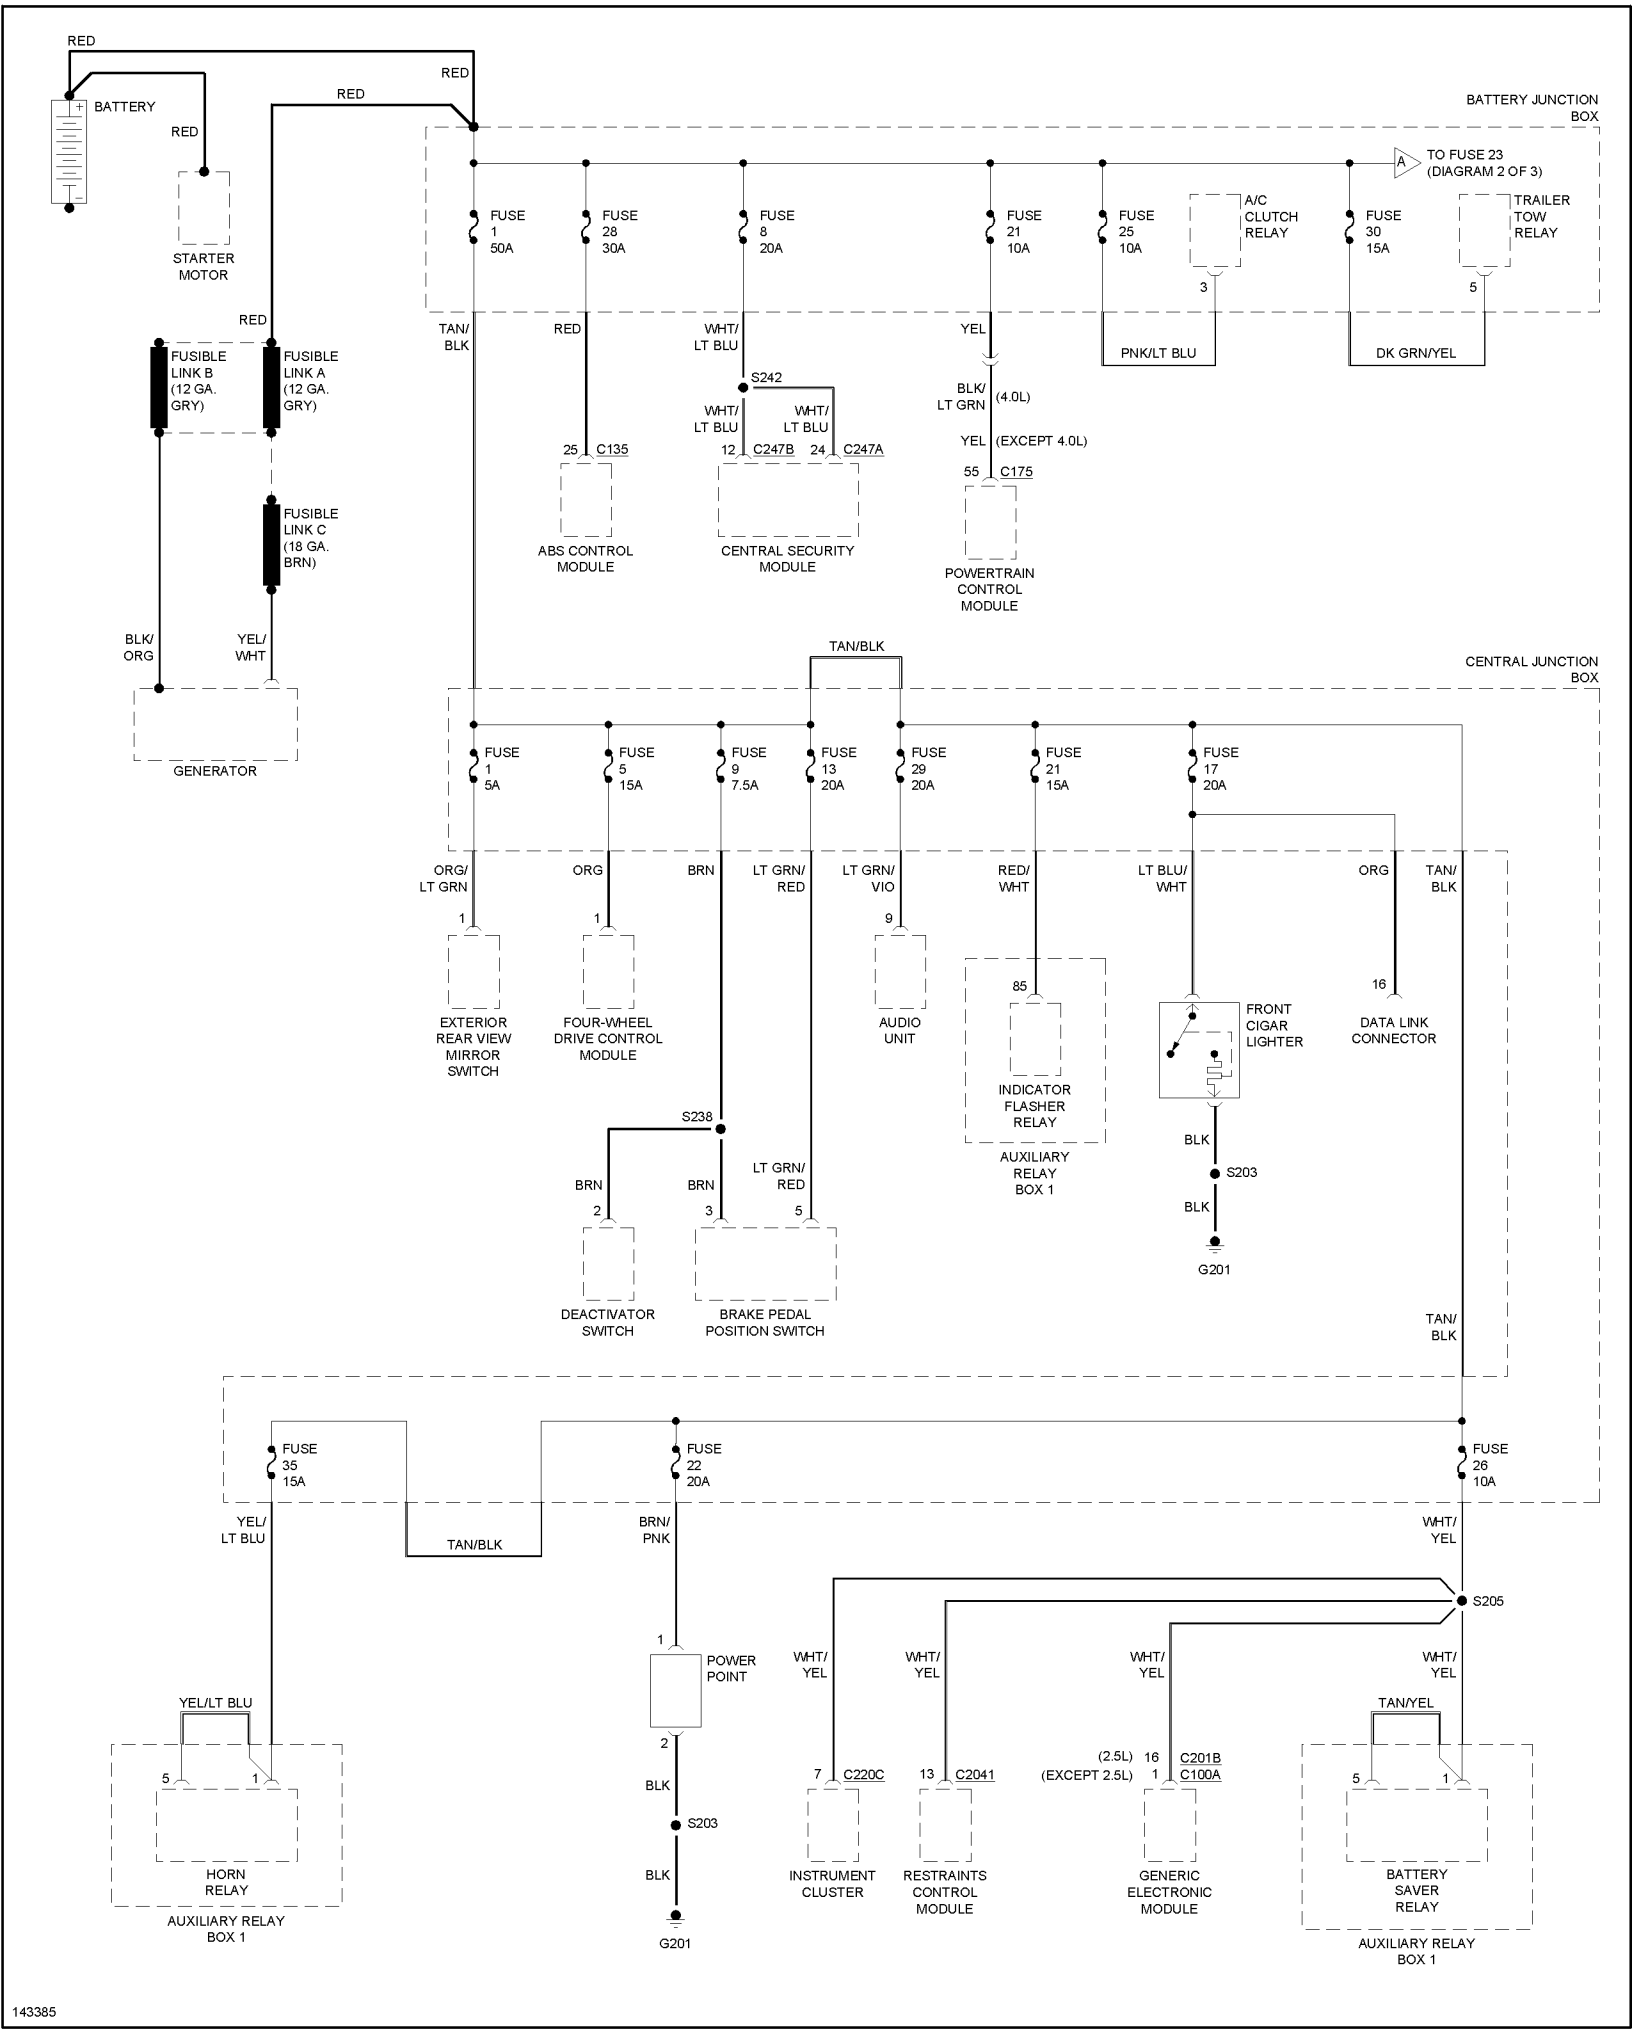
RED
BATTERY
RED
RED
RED
STARTER MOTOR
BATTERY JUNCTION BOX
TO FUSE 23 (DIAGRAM 2 OF 3)
FUSE 1 50A
FUSE 28 30A
FUSE 8 20A
FUSE 21 10A
FUSE 25 10A
A/C CLUTCH RELAY
FUSE 30 15A
TRAILER TOW RELAY
3
5
TAN/BLK
RED
WHT/LT BLU
YEL
PNK/LT BLU
DK GRN/YEL
FUSIBLE LINK B (12 GA. GRY)
FUSIBLE LINK A (12 GA. GRY)
S242
WHT/LT BLU
WHT/LT BLU
BLK/LT GRN (4.0L)
YEL (EXCEPT 4.0L)
25 C135
12 C247B
24 C247A
55 C175
ABS CONTROL MODULE
CENTRAL SECURITY MODULE
POWERTRAIN CONTROL MODULE
FUSIBLE LINK C (18 GA. BRN)
BLK/ORG
YEL/WHT
GENERATOR
TAN/BLK
CENTRAL JUNCTION BOX
FUSE 1 5A
FUSE 5 15A
FUSE 9 7.5A
FUSE 13 20A
FUSE 29 20A
FUSE 21 15A
FUSE 17 20A
ORG/LT GRN
ORG
BRN
LT GRN/RED
LT GRN/VIO
RED/WHT
LT BLU/WHT
ORG
TAN/BLK
1
1
9
85
16
EXTERIOR REAR VIEW MIRROR SWITCH
FOUR-WHEEL DRIVE CONTROL MODULE
AUDIO UNIT
INDICATOR FLASHER RELAY
AUXILIARY RELAY BOX 1
FRONT CIGAR LIGHTER
DATA LINK CONNECTOR
S238
BRN
BRN
LT GRN/RED
2
3
5
BLK
S203
BLK
G201
DEACTIVATOR SWITCH
BRAKE PEDAL POSITION SWITCH
TAN/BLK
FUSE 35 15A
FUSE 22 20A
FUSE 26 10A
YEL/LT BLU
TAN/BLK
BRN/PNK
WHT/YEL
S205
1
POWER POINT
2
BLK
S203
BLK
G201
WHT/YEL
WHT/YEL
WHT/YEL
WHT/YEL
YEL/LT BLU
TAN/YEL
5
1
7 C220C
13 C2041
(2.5L) 16
(EXCEPT 2.5L) 1
C201B
C100A
5
1
HORN RELAY
AUXILIARY RELAY BOX 1
INSTRUMENT CLUSTER
RESTRAINTS CONTROL MODULE
GENERIC ELECTRONIC MODULE
BATTERY SAVER RELAY
AUXILIARY RELAY BOX 1
143385