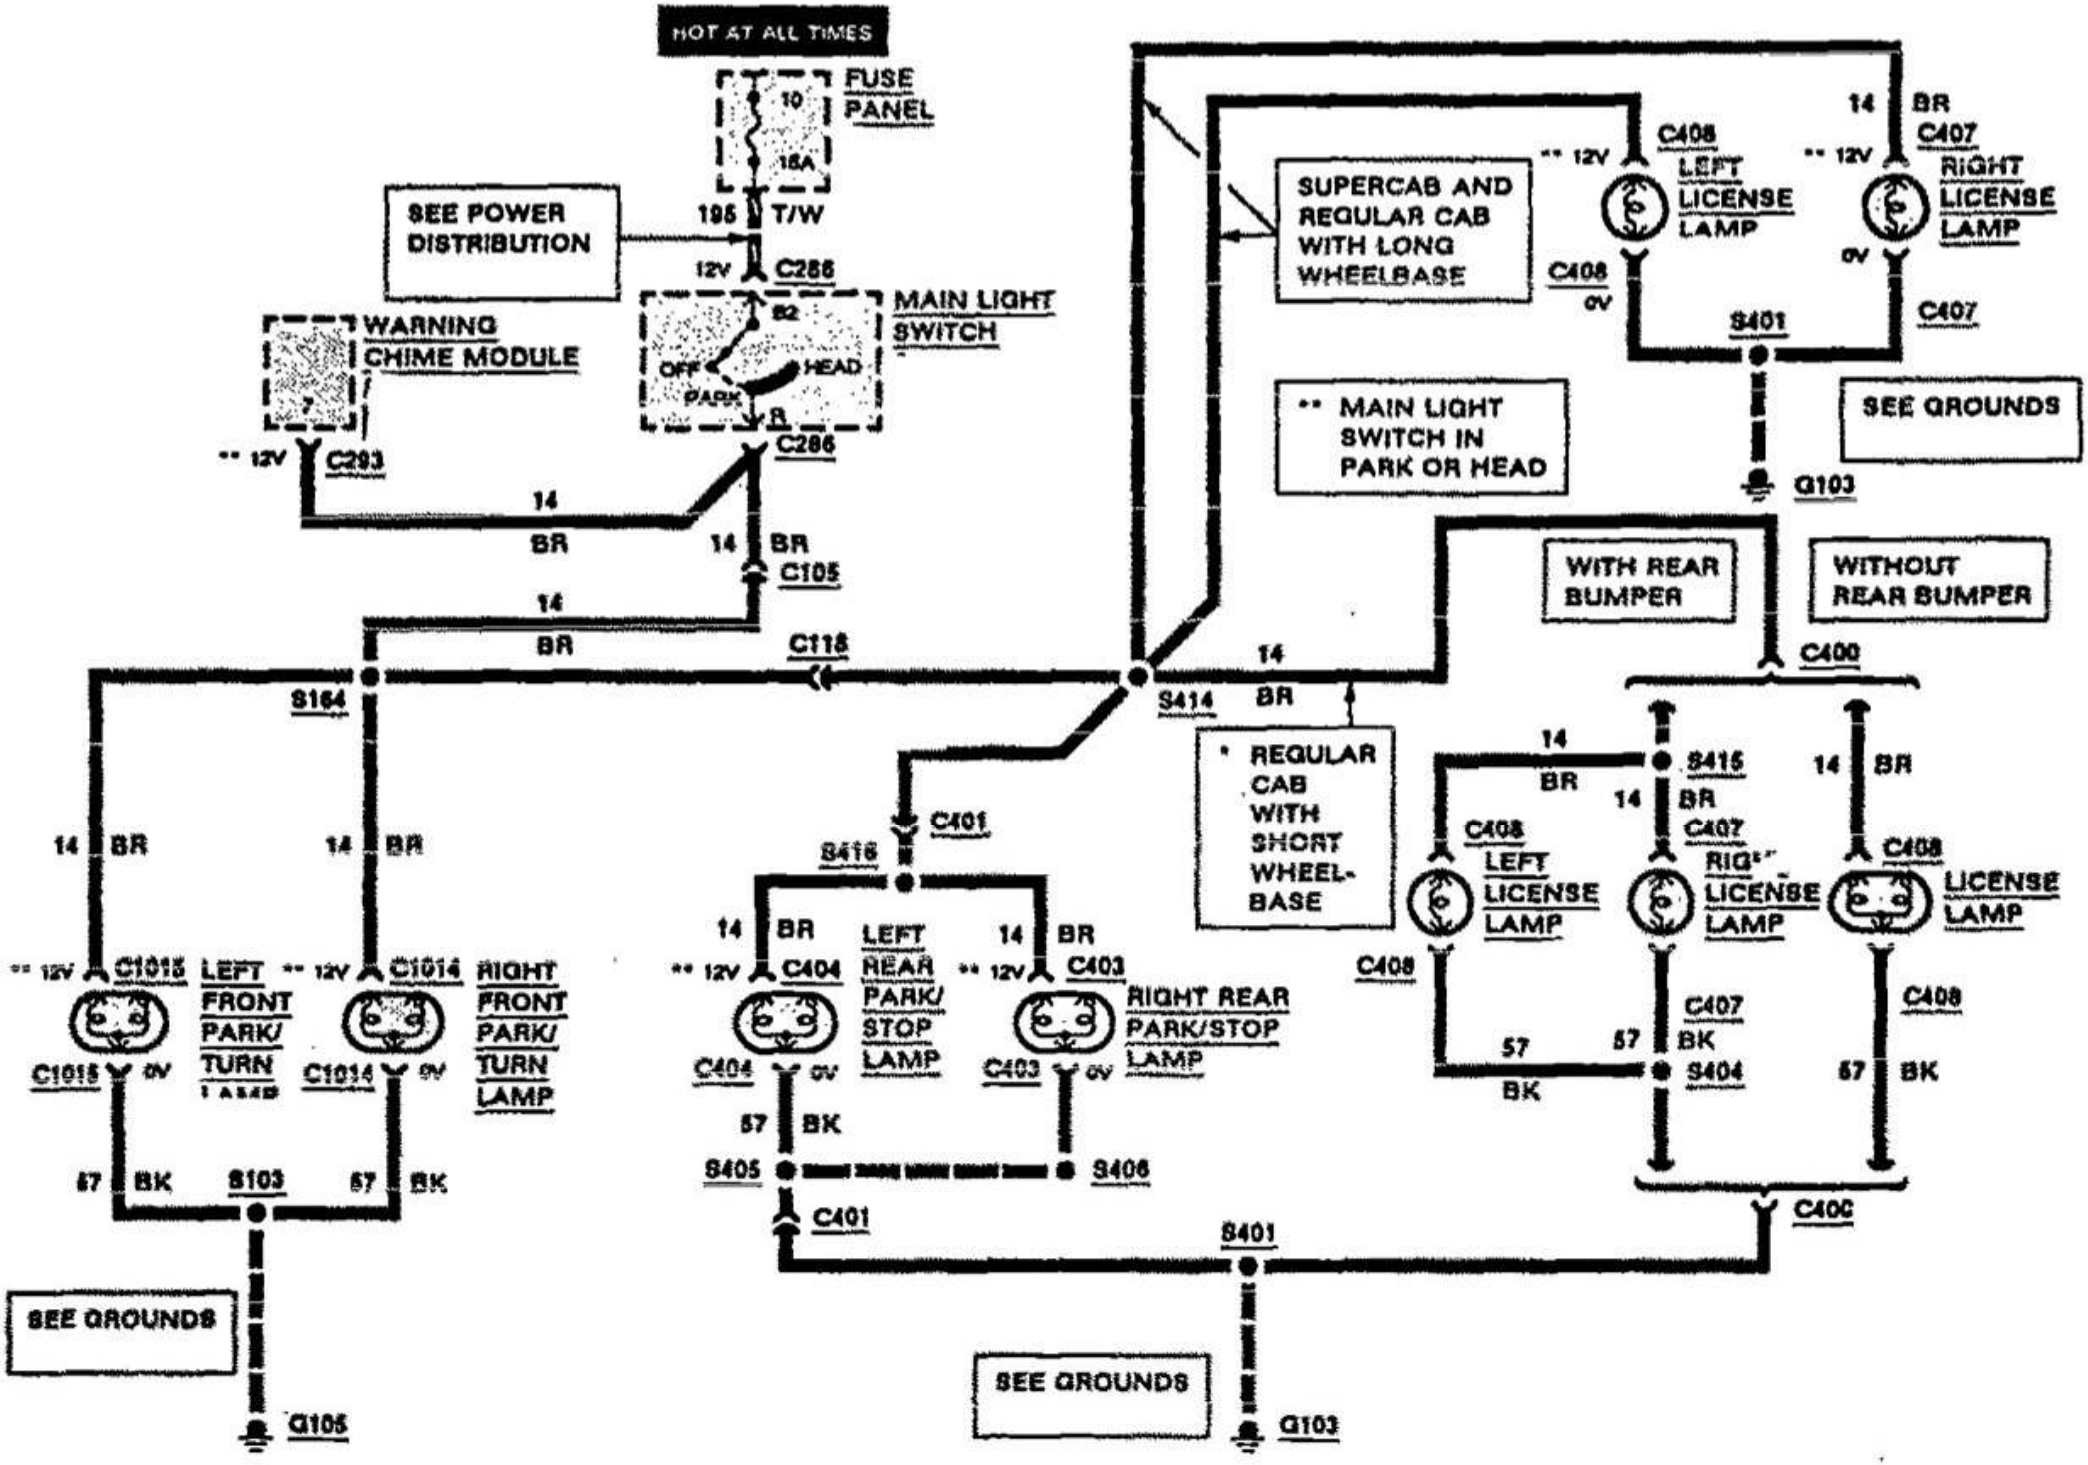
HOT AT ALL TIMES
FUSE PANEL
10
15A
SEE POWER DISTRIBUTION
195 T/W
12V C286
MAIN LIGHT SWITCH
B2
OFF
HEAD
PARK
B
WARNING CHIME MODULE
** 12V C293
14 BR
C286
14 BR
C105
14 BR
C118
S164
14 BR
14 BR
** 12V C1015 LEFT FRONT PARK/ TURN LAMP
** 12V C1014 RIGHT FRONT PARK/ TURN LAMP
C1015 0V
C1014 0V
57 BK
57 BK
S103
SEE GROUNDS
G105
SUPERCAB AND REGULAR CAB WITH LONG WHEELBASE
** 12V C408 LEFT LICENSE LAMP
C408 0V
14 BR
** 12V C407 RIGHT LICENSE LAMP
0V
S401
C407
SEE GROUNDS
G103
** MAIN LIGHT SWITCH IN PARK OR HEAD
WITH REAR BUMPER
WITHOUT REAR BUMPER
C400
14 BR
S414
* REGULAR CAB WITH SHORT WHEEL-BASE
C401
S416
14 BR
** 12V C404 LEFT REAR PARK/ STOP LAMP
14 BR
** 12V C403 RIGHT REAR PARK/STOP LAMP
C404 0V
C403 0V
57 BK
S405
S406
C401
S401
SEE GROUNDS
G103
14 BR
S415
14 BR
C407
14 BR
C408 LEFT LICENSE LAMP
C407 RIGHT LICENSE LAMP
C408 LICENSE LAMP
C408
57 BK
C407
57 BK
S404
C408
57 BK
C400